



LED PICO MAX PROJECTOR 1080P



User Guide

Caution!

WARNING: Please use this product as instructed. Misuse may cause injury or death.



DO NOT use while driving



DO NOT expose to water or wet surfaces. Electric shock may occur.



DO NOT expose the projected LED image to your eyes or the eyes of others



DO NOT block or restrict airflow from ventilation holes as this may cause the projector to overheat



Keep the projector, battery, or charger away from any heat sources

Caution for Battery Use

- Do not pierce or puncture the battery with sharp objects
- Do not heat the product or expose it to high temperature.
- Do not wet it or place it in any liquid

Caution for Headphone Use

- Prolonged use at high volume may impair your hearing.
- High volume during walking or driving may cause distractions and result in injury or death

Table of Contents

Chapter 1: LED Pico MAX at a Glance

- LED Pico MAX Introduction 1
- Keypad 2
- Accessories 3

Chapter 2: Getting Started

- Charging & Powering On / Off 4
- Focus Adjustment / Throw Distance . . . 5
- Mirroring Menu 6
- Connecting to a Device via Digital AV 12
- Connecting to a Computer 14
- Connecting to Composite Video . . . 15
- Connecting to Speaker or Headphones 17
- Connecting a TF Card 18

- Connecting a USB Drive 20

Chapter 3: Menu Screens

- Main Menu 22
- Video Player Menu 23
- Photo Menu 27

Chapter 4: Settings Menu

- Display Settings 32
- Advanced Settings 34
- Language Settings 35
- Bluetooth 36
- Backup & Reset 37
- About 38


Chapter 5: Technical Details

- Frequently Asked Questions 39
- Troubleshooting 40
- Specifications 43
- Notes 44


LED Pico MAX at a Glance

Chapter 1

Main Unit Front/Back

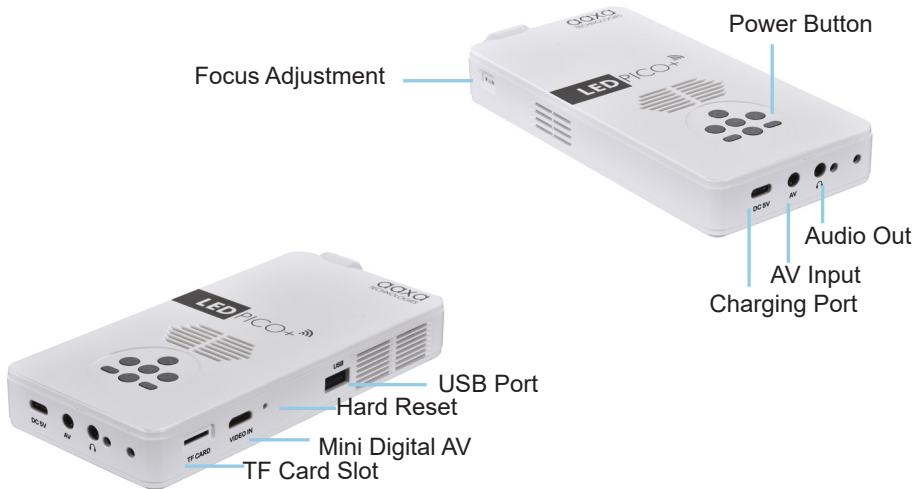

Keypad

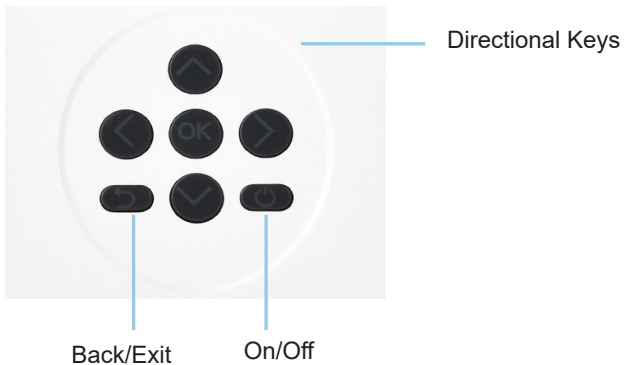

Accessories



Tripod



USB-C to USB-C Cable



HDMI to Mini HDMI Cable

* Under various circumstances, the actual accessories may be different from those shown in the pictures above.

Charging the projector

1. Turn the LED Pico MAX 1080P Projector completely off before charging.
2. Connect the USB-C end of the included Charge Cable to the DC port of the LED Pico+ Projector.
3. Connect the USB-C end of the included Charge Cable to a power source. For continuous operation, a USB-C charger with 5V/3A (15W) is required.

Powering ON the projector

1. To power-on a fully charged LED Pico MAX, hold down the power button for approximately three seconds until the projector turns on.

Powering OFF the projector

 
1. Press the power button once, then again to confirm.
2. After a few seconds, the unit should completely turn off.

NOTE: The LED Pico MAX's battery does not charge when it is in operation.

Focus Adjustment / Throw Distance

Focus Adjustment

- Spin the focus wheel left and right until the image becomes clear.




Throw Distance Chart

Throw Distance Units: Inches	Diagonal Size Units: Inches
20	12
30	18
40	25
50	31
60	37

Throw Ratio 1.9:1

Projection Angle: 100% Offset

*minimum throw distance: 3 inches

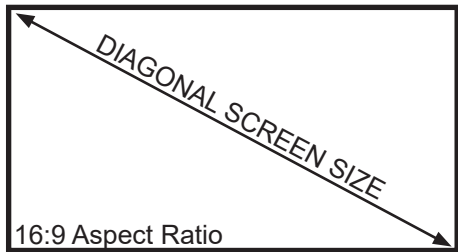

Mirroring Menu


- The LED Pico MAX allows for wireless mirroring and projection of smartphone content including pictures, videos, and other on-screen media. The wireless mirroring function works through a direct wireless connection and is compatible with smartphones that provide this feature.
- This includes most Samsung/Android compatible smartphones and most Apple/iPhone compatible smartphones. If you are unsure whether this feature exists in your smartphone, please check with the manufacturer.
- NOTE: Copyright content such as Netflix, Amazon Prime, HBO, etc. content cannot be mirrored.



Mirroring Menu

To Wirelessly Mirror your smart device

1. In the Main Menu, select the Mirroring icon.
2. In the Mirroring submenu, select your smart device manufacturer (iPhone compatible or Android compatible).

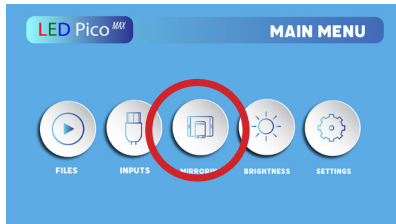

Direct Mirroring for Android Compatible Devices

- Once the Mirroring Menu appears, select the mirroring feature in your smart device.
- For Samsung phones this is often the “Smart View” icon. (fig. 2.1)
- The Smart View icon can typically be found by swiping down on the settings menu and selecting the icon; or it can be found through a features search.
- Click on the “Smartview” icon – this will allow your smart device to search for the LED Pico MAX. (fig. 2.2)
- Select “AAXA-PICOMAX” as the device. The screen should automatically begin to mirror upon connection.

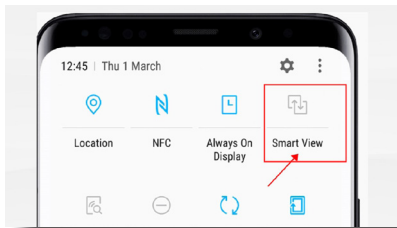


fig. 2.1

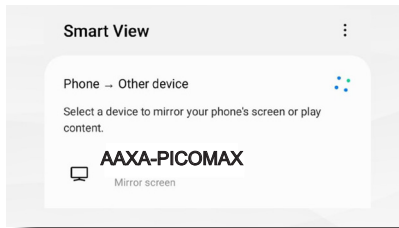


fig. 2.2

Direct Mirroring For iPhone Compatible Devices



- Enter the “iPhone Compatible” mirroring submenu
- Go to your iPhone settings, Select Wireless Connections (fig. 2.3)
- Select “AAXA-PICOMAX” as a wireless connection (fig. 2.4)

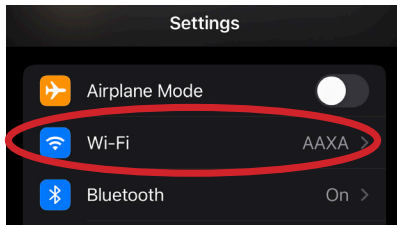


fig. 2.3

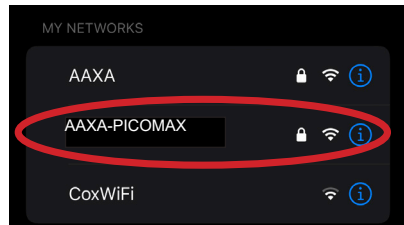


fig. 2.4

Direct Mirroring For iPhone Compatible Devices

- The password should be “12345678”.
- In your iPhone’s “Screen Mirroring” menu, select AAXA-PICOMAX (fig. 2.5). The Screen Mirroring Menu can typically be found by swiping down from the Home screen.
- Tap “Stop Mirroring” when you wish to stop mirroring your iPhone.

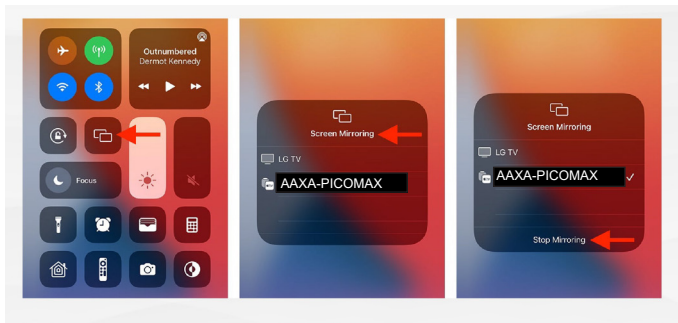


fig. 2.5

Screen Mirroring FAQ

Q: Why can't I see Netflix, Hulu, Amazon Prime, etc. content?

A: Content copyright under DMCA cannot be displayed via wireless screen mirroring.

Q: Can I use wired mirroring instead of wireless mirroring for iPhones?

A: Yes. You can use a USB-C to mini-HDMI cable to mirror your iPhone. The LED Pico MAX is also compatible with wired mirroring through Apple's proprietary Lightning to HDMI adapter. This can be purchased from an authorized Apple Retailer.

Note: Samsung is a trademark of Samsung Group and iPhone is a trademark of Apple inc. AAXA Technologies Inc claims no rights.


Connecting to a Device via Digital AV

The LED Pico MAX has a mini-Digital AV port. A Digital AV cable is required to connect your LED Pico MAX to Digital AV compatible devices.

In the Main Menu



Select "INPUTS" icon

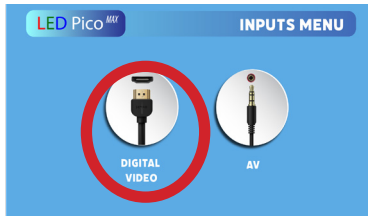

Select "DIGITAL VIDEO" icon

Connectivity to Multimedia Devices

The LED Pico MAX can connect to many media devices including: computers, laptops, iPhones, iPads, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

**Some smartphones and tablets require video out capabilities to be displayed with the LED Pico MAX. Check with the manufacturer.*

Connecting to a Device via Digital AV (Cont)

Step 1:

Connect one end of the mini-Digital AV Cable to your device's Digital AV port.



Step 2:

Connect the other end of the mini-Digital AV Cable to your LED Pico MAX's Video In port.



Step 3:

In the Main Menu, select the "INPUTS" icon and then the "DIGITAL VIDEO" icon, as shown on page 12. Your LED Pico MAX should now be displaying the content from your device.

Note:

If you're connecting to a computer or laptop and the projector does not automatically mirror it, read onto the next page for more information.

Connecting to a Computer

Step 4:

Enabling Digital Video output on your Computer – To enable Digital Video output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable Digital Video output. Below are standard instructions for a Windows 10 computer – not all systems are the same.

Step 5:



Press Windows+P to toggle through display settings. Select either “Duplicate” or “Extend” depending on your viewing option.

**NOTE: different operating systems may differ*

Step 6:

Scale and layout

Change the size of text, apps, and other items

100% (Recommended) ▾

Advanced scaling settings

Display resolution

1920 × 1080 (Recommended) ▾

Display orientation

Landscape ▾

Multiple displays

Multiple displays

Duplicate these displays ▾

1. Right click on computer desktop and select “Screen Resolution”
2. Display Properties window will pop up
3. If a secondary monitor is grayed out, click on it and select “Extend these displays” in the “Multiple Displays” drop down
4. If the image is blurry or the text is not legible, adjust the screen resolution. We recommend 1920x1080.

Connecting to Composite Video

Step 1:

Connect the 3.5mm Composite AV Cable to the AV Port of the LED Pico MAX.



Step 2:

Plug the composite end of the AV Cable (Red, White, Yellow) to your device.




Connecting to Composite Video Cont.

Step 3:

In the Main Menu



Select "INPUTS" icon

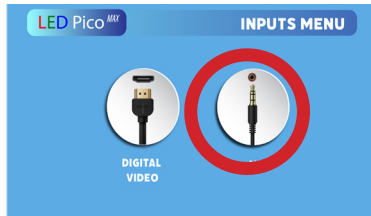

Select "AV" icon

Step 4:

Turn on your multimedia device. If available, select 1920x1080.

Connectivity with multimedia devices

The LED Pico MAX can connect to many media devices including: DVD players, Blu-Ray players, smartphones, cameras, video game consoles and other peripherals with ease.

**Some smart phones require video out capabilities to be displayed with the LED Pico MAX. Check with your phone manufacturer.*

Connecting to Speakers / Headphones



Step 1: Connect your speaker/headphones to the projector's audio port.

Step 2: Ensure that the projector and/or the headphones are powered on.

Step 3: Place the headphones on and enjoy!

*CAUTION: Prolonged use of headphones at a high volume may impair hearing.

TF Card

How to insert your TF Card

- Slide in your TF card into the TF card slot on the side of the LED Pico MAX (facing up as shown in picture).
- Gently slide the TF card until it clicks into place.

How to access your TF Card

- Once your TF Card has been inserted, you can navigate to any media content in the main menu.
- After selecting the media content, choose the TF card selection.
- You can now access the data on your TF card through the onboard media player

***Review the “Specifications” section of this manual to read about the supported file formats.**



(up to 512 GB)



Note: Microsoft Office and PDF file formats are not supported directly. In order to view a slideshow, you need to convert your slideshow into JPEG pictures first.

TF Card Cont.



Media Player menu

- In the Main Menu, select the type of file you wish to play.
- Select the TF Card icon to access your files.

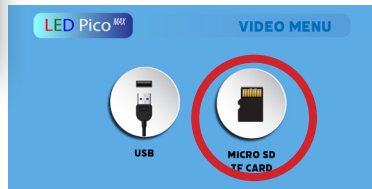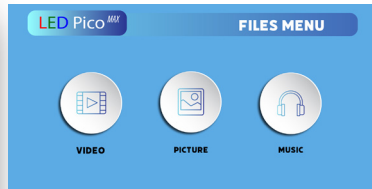

File Menu System

- The LED Pico MAX will show all folders and files you have on your TF Card.
- Use the keypad to navigate to different folders or files.

USB Drive

How to insert your USB Drive

- Slide your USB Drive (up to 512GB) into the USB port.
- Gently slide the drive until it cannot go in any further.

How to access your USB Drive

- Once your USB Drive has been inserted, you can navigate to any media content in the Main Menu.
- After selecting the media content, choose the USB selection.
- You can now access the data on your USB drive through the onboard media player.

***Review the “Specifications” section of this manual to read about the supported file formats.**





Note: Microsoft Office and PDF file formats are not supported directly. In order to view a slideshow, you need to convert your slideshow into JPEG pictures first.

USB Drive Cont.



Media Player menu

- In the Main Menu, select the type of file you wish to play.
- Select the USB Drive icon to access your files.

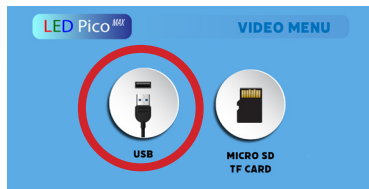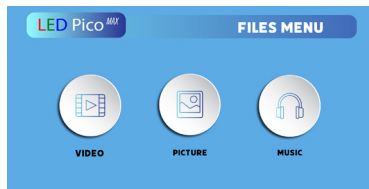

File Menu System

- The LED Pico MAX will show all folders and files you have on your USB Drive.
- Use the keypad to navigate to different folders or files.

Main Menu

The LED Pico MAX features a built-in PMP (Portable Media Player) function. This function allows the projector to play videos and pictures directly from your connected devices.



- Press the left and right directional buttons on the keypad to choose an icon from the Main Menu.
- To select a menu option, press the “OK” button in the center of the keypad.
- To go back to the previous screen, press the “Back” button.

Video Player Menu

Opening a file:

- Select the “FILES” icon and the type of media you wish to play.
- From the sub menu, select the storage media with the stored files.
- Choose which file you wish to play.



The LED Pico MAX will show all folders and files you have on your USB or TF card. Use the keypad to select folders or files.

Video Player Menu

While Playing Videos

While playing videos, you can adjust the volume by pressing the right and left buttons on the keypad. Other video playback controls are available in the video player submenu - which is accessible by pressing the “OK” button.



Volume Down



Volume Up



 
Enter Video Player Submenu

- To open/hide the video playback menu, use the “OK” and “Back” Buttons on the keypad.

Video Player Sub-Menu

Playing Videos

The Video Player Sub-Menu can be accessed by pressing “OK” during video playback. To exit the Video Player Sub-Menu, press the “Back” button or wait 10 seconds. To navigate the Playback Menu, use the directional buttons on the keypad to highlight the option you wish to choose.




◀ Move selection left

▶ Move selection right



 Confirm selection



Video Playback FAQ

How do I loop a video?

1. Choose either USB or TF Card for playback
2. Navigate the folders until you reach the file you wish to play.
3. Choose the file you want to play.
4. Press “OK” when video is playing, then move selection left on video player menu to “Repeat A” and press “OK” until it shows “Repeat One”.
5. The video will now loop after playback is finished.

 


Photo Menu

Opening A File:

- Select “Files” from the Main Menu, then select the “Photo” icon.
- From the sub menu, select the storage media with the stored files.
- Choose the file you wish to play.




The LED Pico+ will show all folders and files you have on your USB Drive or TF Card. Use the directional buttons to navigate to different folders or files.

Photo Menu

While Viewing Pictures

 While viewing pictures, you can simply navigate through all images by pressing the left and right buttons on the keypad. Further controls are available in the Photo Submenu - which is accessed through the “OK” button.



Previous Picture




Next Picture

Photo Sub-Menu

Viewing Pictures:

 After pressing “OK” during picture slide-show playback, the Photo Sub-Menu appears. To exit the Photo Sub-Menu, press the “Back” button or wait for 10 seconds. Pictures can be rotated and zoom in/out based on the option you choose on the Sub-Menu. To navigate the Sub-Menu, use the keypad to move selection.



◀ Move selection left

▶ Move selection right

Ⓞ OK Confirm selection

 


Photo Slideshow FAQ

How do I convert PPT to JPG?

1. Open your presentation on your PC or Mac.
2. Go to “Save As” and save your presentation as .JPG files.
3. Choose “All slides”.
4. *If you have more than 10 slides, you must rename Slides 1-9 with a “0” in front of it or the playback order will be mixed up. If you have more than 100 slides you will need to use a “00” format.
5. Copy the files either to a TF Card or an USB drive.
6. Insert the TF Card or USB drive into the projector.
7. View the slideshow under “PHOTOS”

 


Photo Slideshow FAQ Cont.

How do I play a slideshow?

1. Choose either USB or TF Card for playback.
2. Navigate to the folder that contains the pictures you wish to see in the slideshow.
3. Confirm selection of the first picture.
4. Press “play” in the photo submenu.
5. Slideshow will now play
6. Note: Selecting “repeat all” in the photo submenu will loop the slideshow.



How do I manually control the slideshow?

1. After selecting the photo you wish to display, you can press “play” to start the slideshow in the photo submenu (as outlined in the previous FAQ).
2. To manually control the slideshow, you can stop the slideshow by pressing “stop” within the photo submenu.
3. You may use the keypad to advance or go back through the pictures in the current playlist.

Settings Menu

Chapter 4

The Settings Menu can be accessed by selecting "SETTINGS" on the main menu

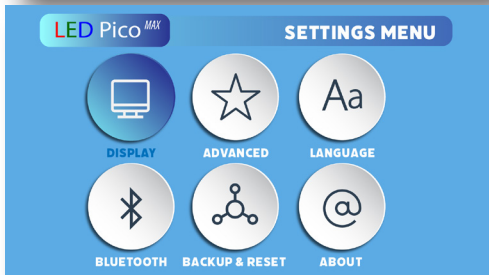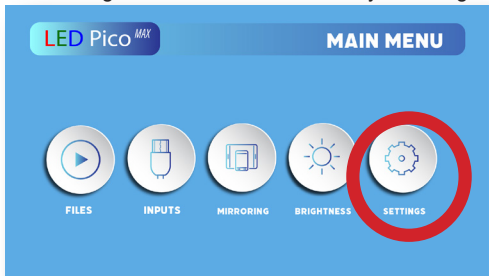

Display

- Picture Mode
- Color
- Color Temperature
- Keystone

Advanced

- Projection Zoom
- Projection Mode
- Aspect Ratio
- Screen Mode
- Slideshow Time

Language

- OSD Language

Bluetooth

- Bluetooth On/ Off

Backup & Reset

- Reset
- Software Update (USB)

About

- Version


Display Settings

Keystone

- “Keystoning” occurs when a projector is aligned non-perpendicularly to a screen, or when the projection screen has an angled surface. The image that results from one of these misalignments will look trapezoidal rather than square.
- If the image looks trapezoidal, adjust the keystone until the keystone effect corrects and the the picture turns into a square projection.

Picture Mode

- Changes the picture mode to different settings depending on your usage.

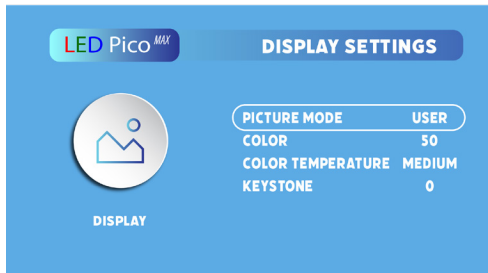


Color

- Adjusts the color of the image.

Color Temperature

- Adjusts the color temperature (cold, medium, warm).

Advanced Settings

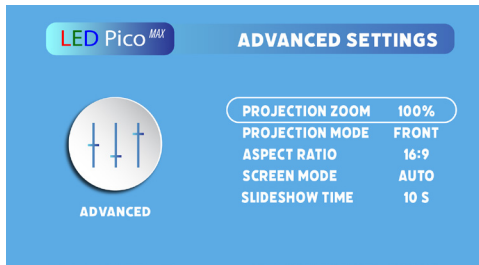

Projection Zoom

- Adjust the size of the projection image by zooming in or zooming out

Projection Mode

- Adjust the projection direction

Aspect Ratio

- Changes the aspect ratio of the projection image.

Screen Mode

- Sets the screen mode to Auto, PC or Video.

Slideshow Time

- Increases or decreases the time of the slideshow


Language

OSD Language

- Adjusts the language.



Bluetooth

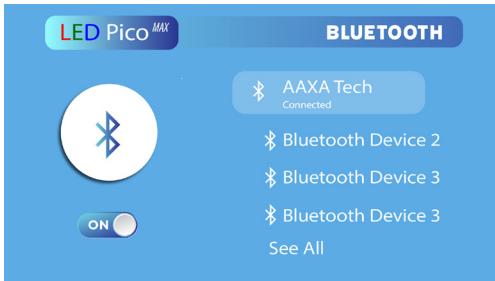

Bluetooth

- Turns on or turns off the Bluetooth connection.
- Connects your LED Pico MAX projector to your Bluetooth speakers.


Backup & Reset

Reset


- Resets the projector.

Software Update (USB)

- Updates the software of the projector.

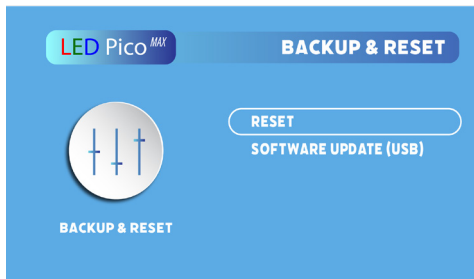

About

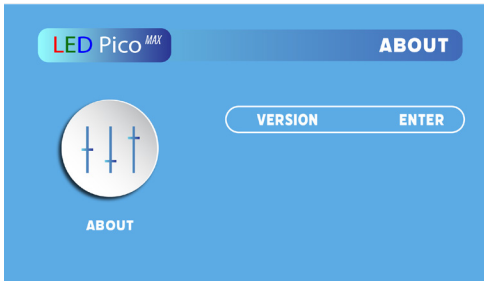

Version

- Version of the firmware

FAQs

<i>QUESTIONS</i>	<i>ANSWERS</i>
Does this unit have an audio output connection or not?	Yes, the LED Pico MAX has a headphones out jack (3.5 mini jack).
Is there a tripod in the box?	Yes, the LED Pico MAX comes with a mini tripod.
How long should I charge this projector?	5-6 hours should be sufficient, the led light next to the charging port will change to green when fully charged.
Does it have remote?	No, the LED Pico MAX does not come with a remote control.
How big does the screen make?	The maximum screensize of the LED Pico MAX projector is 120".

Technical Details

Troubleshooting

IMAGE IS BLURRED

Possible Causes	Solution
The Projector is not in focus.	Adjust the focus with the focus adjustment dial until the image comes into focus.
The Projector is offset from plane / angle of operation.	Move the projector so that it is both 180 degrees and on an even plane with the screen. You can also use Keystone in the Settings Menu to set up your image.

NO SYNC, NO SIGNAL

1. Be sure to setup the computer to enable a video signal output. On some laptops this is done by pressing and holding Function F5 key. If using the LED Pico MAX as an external monitor on Windows based systems, this can be done by selecting "extend my desktop to this monitor". The native resolution of the LED Pico+ projector is 1920x1080. Depending on the video driver different resolutions may need to be selected for proper output.

Technical Details

Troubleshooting

THE PROJECTOR DOES NOT TURN ON

Possible Causes	Solution
Low battery	Charge the projector until the battery is fully charged (LED indicator on bottom of unit show a green light). Projector must be turned off while charging.
There is no power.	Check to ensure the power outlet source is good. Check the Power Adapter/ USB Cable to ensure a proper connection with the wall outlet or computer as well as the projector. Ensure the projector is off while charging.
The power button was not held long enough.	To power on the projector, the power button needs to be depressed for a full 3 seconds. try holding the power button until the optical engine turns on

Technical Details

Troubleshooting

THE PROJECTOR SHUTS OFF WHILE IN USE

Possible Causes	Solution
Incorrect power output used	For continuous operation, a USB-C Charger with 5V/3A output output is required.
Low battery	Charge the projector until the battery is fully charged (LED indicator on bottom of unit show a green light). Projector must be turned off while charging.

NO PICTURE / FILE NOT SUPPORTED

Possible Causes	Solution
The video source is not properly connected or selected.	Check the video source signal to ensure that it is properly connected. Select the current input source by choosing the input desired from the main menu
Incorrect file extension / Video is encoded with incorrect codec.	Please refer to “Specifications” page to see which file types and codex are supported. Verify that the file was encoded properly.

Specifications

Brightness:	100 Lumens
Native Resolution:	1920x1080 (1080P Full HD)
Contrast Ratio:	1000:1
Aspect Ratio:	16:9
Projection Lens:	Manual Focus
Image Size:	8~120 inches
Lamp:	Triple RGB LEDs with Vibrant Color Technology Life 25,000hrs
Video in:	Composite A/V Mini-Digital AV
Audio Output:	3.5 mm audio jack
TF Card:	TF Card Slot (512GB maximum)
USB:	USB 2.0 (Full Size) (512GB maximum)
Dimensions:	165mm x 78mm x 22mm
Weight:	0.72 lbs / 11.5oz
Supported File Formats:	MP3 / WMA / OGG / WAV / AVI / JPG / GIF
Battery Life (Eco Mode):	Up to 2 Hours
Wireless Mirroring:	IOS, Android Supported
USB Power Output:	5V 0.5A (2.5 Watts)



Notes

Please direct all customer service inquiries to:

AAXA Technologies, Inc.
17781 Sky Park Cir., Suite F
Irvine, CA 92614
(714) 957-1999
info@aaxatech.com